

AURORA

LOW-SMOKE TABLE GRILL



AURORA




AURORA MIRROR



EN

INSTRUCTIONS FOR USE

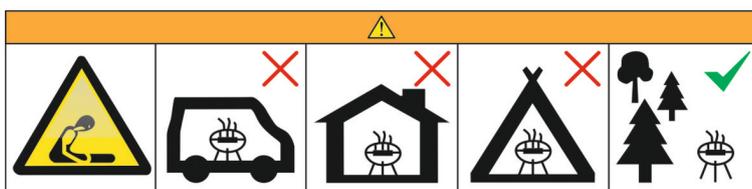

Do not use the grill in enclosed and/or living spaces such as houses, tents, caravans, campervans and boats. Risk of carbon monoxide poisoning.

CONTENTS

ABOUT THIS TABLE GRILL

3

SYMBOLS IN THIS MANUAL

3

UNPACKING THE TABLE GRILL

4

SAFETY INSTRUCTIONS
DESCRIPTION OF PARTS/SCOPE OF DELIVERY
BASIC DESIGN

OPERATING THE TABLE GRILL

6

SAFETY INSTRUCTIONS
BATTERY OPERATION
POWER BANK OPERATION
LIGHTING THE CHARCOAL

AURORA MIRROR FEATURES

9

SAFETY INSTRUCTIONS
LED AMBIENT LIGHT
GRATE LIFTER

CLEANING THE TABLE GRILL

10

SAFETY INSTRUCTIONS

DISPOSING OF THE TABLE GRILL

10

ACCESSORIES

11

WARRANTY

12

MANUFACTURER

12



www.tuv.com
ID 1419049714



ABOUT THIS TABLE GRILL

Congratulations on purchasing this Enders product!

Before assembling and operating the device, read and observe these instructions for use and the safety instructions. Only use the product as described in these instructions, to prevent accidental injury or damage.

Keep these instructions for future reference. If the item is given to someone else, please also pass on these instructions.

We hope you enjoy using your Enders device.

SYMBOLS IN THIS MANUAL



This symbol stands for the signal word **CAUTION** and warns you of possible injuries or material damage as well as damage to the device.



To avoid scratching the device, **do not use a blade** or similar sharp objects to open the packaging.



Useful **tips** and **information**.

UNPACKING THE TABLE GRILL

SAFETY INSTRUCTIONS




- Risk of death by suffocation/swallowing. Keep the packaging material out of reach of children and dispose of it immediately. Also keep small parts out of their reach.
- Remove all packaging materials and protective films from the individual parts before starting with the assembly.




DESCRIPTION OF PARTS/SCOPE OF DELIVERY

No.	Description AURORA	Quantity
1	Body	1
2	Reflector trough	1
3	Ignition bowl	1
4	Charcoal container	1
5	Grease guard	1
6	Enamelled grill grate	1
7	USB cable (5 V DC)	1
8	Grate lifter	1

No.	Description AURORA MIRROR	Quantity
1	Body	1
2	Reflector trough	1
3	Ignition bowl	1
4	Charcoal container	1
5	Grease guard	1
6	Enamelled cast grate	1
7	USB cable (5 V DC)	1
8	Grate lifter	1
	with mood lighting	

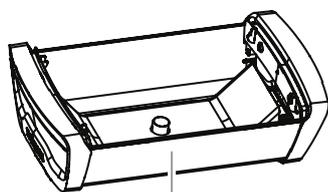


1

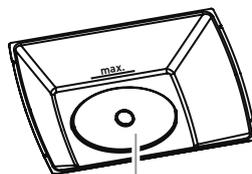

2



 
3




4



5

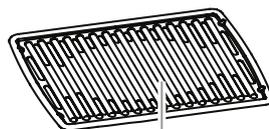

6

 


7



8

BASIC DESIGN

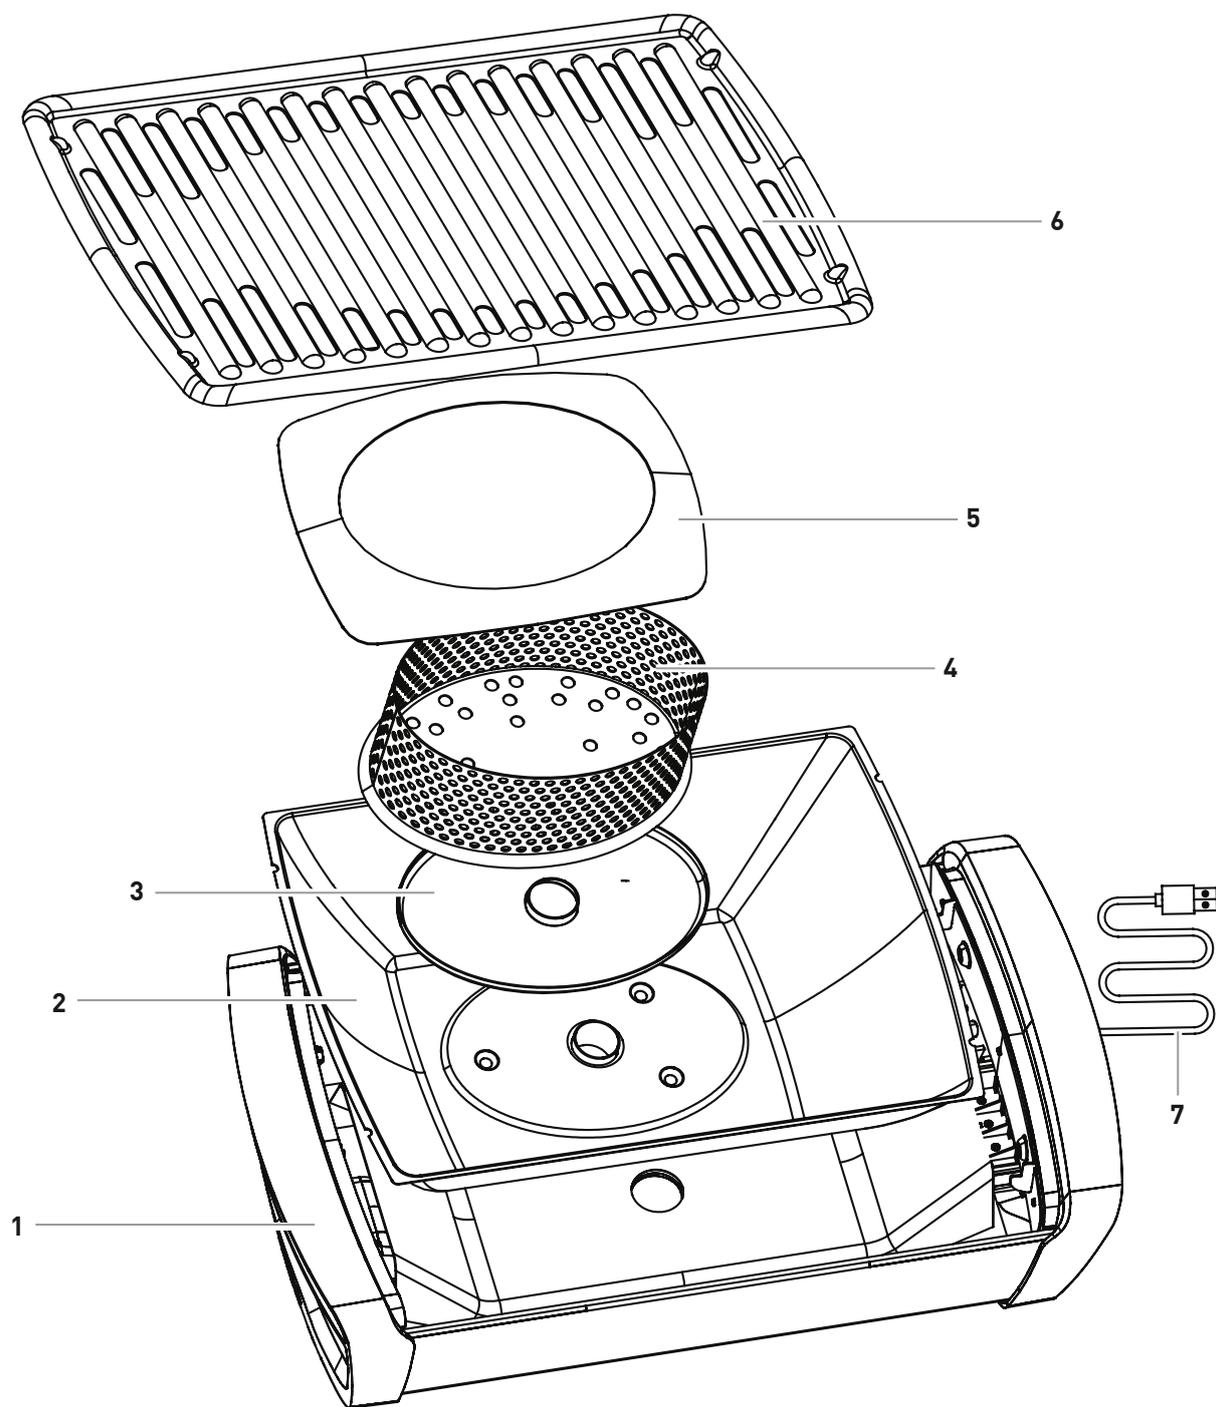

OPERATING THE TABLE GRILL

SAFETY INSTRUCTIONS



READ BEFORE USE


- CAUTION! Do not move this grill during operation as it becomes very hot!
- Do not use in enclosed spaces! There is a risk of carbon monoxide poisoning when grilling indoors.
- CAUTION! Do not use alcohol or petrol for lighting or relighting the grill! Only use ignition aids that comply with EN 1860-3!
- CAUTION! Keep away from children and pets!
- CAUTION! For safety reasons, the device may only be ignited with ignition paste. Make sure that no ignition paste gets into the air duct. Do not use a charcoal starter or anything similar!
- Do not remove the charcoal from the charcoal container after lighting.
- Do not place food on the grill until the fuel is covered with a layer of ashes!
- Never leave the hot grill unattended.
- Never touch metal parts; they can be very hot.
- Make sure that the grate is always correctly positioned on the supports.
- Never operate the charcoal grill without the grease guard (part no. 5).
- Dab excess fat/marinade off the food before grilling. This does not diminish the taste of the grilled food; it is purely to prevent a grease fire.
- To avoid a grease fire and to prevent grease from flowing into the interior, make sure that any grease dripping from the grill does not exceed the "max" mark.
- Let the grill cool down completely before cleaning.
- Please always choose a safe, level surface in a suitable location to use the grill.
- The device should not be transported while warm.
- We recommend that the grill be heated up before first use and that the fuel burns for at least 30 minutes.
- The charcoal container has a maximum capacity of 150 g for Enders Beech Charcoal.
- Do not use this grill near flammable objects.
- Do not use aerosol sprays near the device.
- Make sure that the live parts do not get wet.
- Do not allow the enamelled cast grates to come into contact with highly acidic food.
- To prevent damage to the coating of the enamelled grill grate due to thermal shock, never place very cold or frozen food on it! (Only applies to grill grates.)
- Do not allow children to play with the device.
- Do not allow children to carry out cleaning or user maintenance.

BATTERY OPERATION FIRE AND EXPLOSION HAZARD




Danger for children and persons with reduced physical, sensory or mental capabilities (e.g. partially disabled people, elderly people with reduced physical and mental capabilities) or a lack of experience and knowledge (e.g. children).

- Keep the device away from children younger than 8 years of age.
- Children over 8 years of age may only switch the device on and off if they are supervised or have been instructed in the safe use of the device and have understood the dangers involved.
- CAUTION: Risk of explosion if batteries are not handled properly.
- Batteries must not be charged, reactivated by other means, taken apart, thrown into fire, heated or short-circuited. Otherwise there is an increased risk of explosion and leakage, and gases may escape!
- Avoid contact of the battery fluid with skin, eyes and mucous membranes. In case of contact, rinse the affected areas immediately with plenty of clean water and consult a doctor immediately.
- Safe handling of the batteries must be ensured: only commercially approved AA/LR6 batteries in perfect condition may be used.
- CAUTION! Do not use rechargeable batteries. The temperature in the battery compartment can be very high.
- CAUTION! Batteries may only be changed when the device has cooled down.
- If necessary, clean the battery and device contacts before inserting them.
- Remove the batteries from the grill when they are flat or if you do not intend to use the grill for a long time. This way you avoid damage that can be caused by battery leakages.
- Do not expose batteries to extreme conditions, e.g. by storing them on heaters or in direct sunlight. Increased risk of leakage!

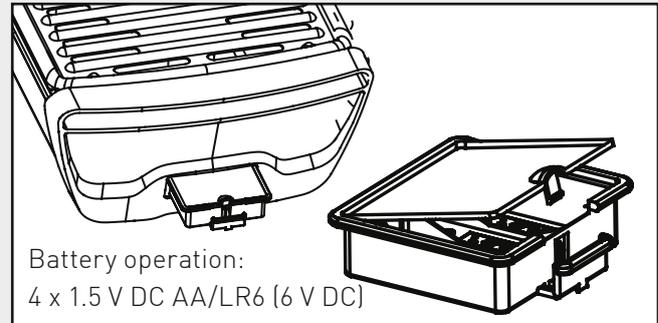


POWER BANK OPERATION FIRE AND EXPLOSION HAZARD

Alternatively, the table grill can also be operated with a certified power bank.

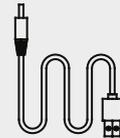




- CAUTION! Do not place the power bank too close to the long side of your table grill.
- CAUTION! Only power banks certified according to EN 60950-1 and EN 62368-1 may be used.

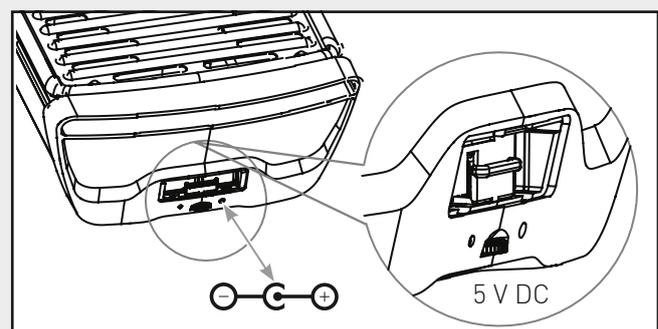

LIGHTING THE CHARCOAL



1. Open the battery compartment lock on the outside of the grill. To lock or unlock the battery compartment, press lightly against the handle. The battery compartment can be pulled out for removal. Insert four AA/LR6 batteries. Please ensure the correct polarity. Slide the battery compartment back into the side panel and close it.
2. Fill the charcoal container completely to the brim with Enders Beech Charcoal (max. 150 g).
3. Apply an even, approximately 10 mm-wide ring of the Enders Ignition Paste around the hole of the ignition bowl (approx. 20 ml). The ignition bowl is positioned in the designated recess.
4. Switch on the fan control knob on the exterior and turn it to the highest level to begin with (three-dot position). To prevent the flame from being smothered during the ignition process, the fan must remain switched on until the charcoal is glowing completely.
5. Light the ignition paste. Do not touch the open flame.
6. Place the filled charcoal container together with the grease guard on the ignition bowl. Make sure that the charcoal container is resting evenly on the ignition bowl.
7. Place the grill grate on the designated holders on the outer sides. Make sure that the grill grate is supported evenly.
8. After approximately 10 minutes, the charcoal will be glowing completely, and the AURORA is ready for use. Do not place food on the grill until the fuel is covered with a layer of ashes! You can adjust the grate heat to suit your needs using the control knob on the side.

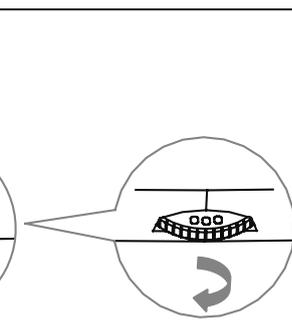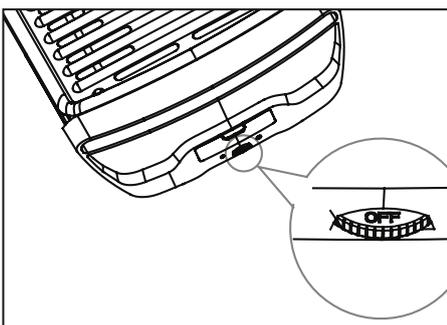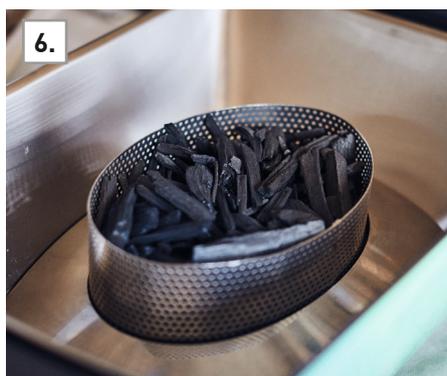

SETTING 3
Ignition setting and full load

AURORA/AURORA MIRROR FEATURES

SAFETY INSTRUCTIONS




- CAUTION: Do not switch the LED ambient light on and off during operation!

- Make sure that the live parts do not get wet.
- Do not allow the enamelled cast grates to come into contact with highly acidic food.





- The LED light can be switched on and off with a push button underneath the device.

LED MOOD LIGHT (ONLY AURORA MIRROR)

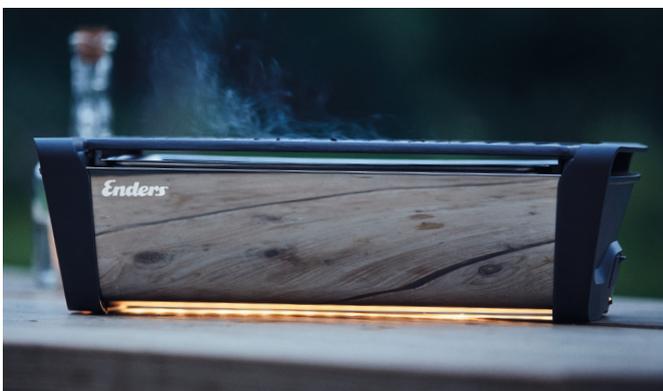

GRATE LIFTER

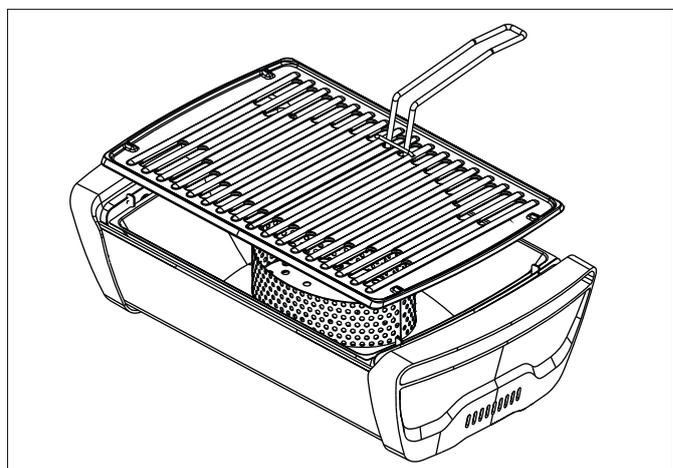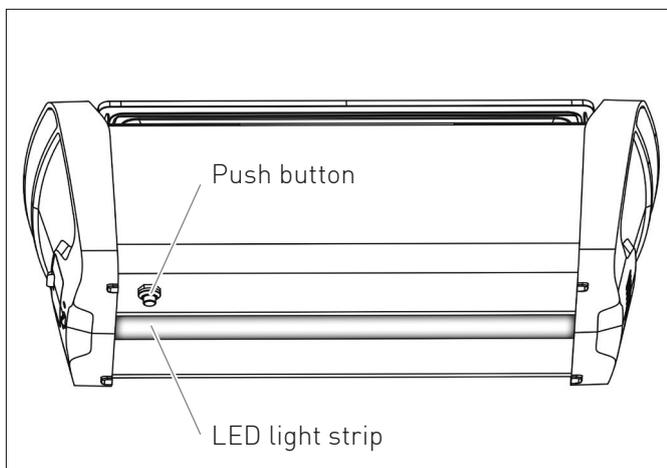


CLEANING THE TABLE GRILL

SAFETY INSTRUCTIONS



- Despite careful processing of all individual parts, individual components may have sharp edges. For this reason, wear safety gloves to prevent cuts.
- Hot surface: wait until the charcoal grill has cooled down sufficiently before cleaning.
- Do not use flammable cleaning agents.
- Make sure that the live parts do not get wet.

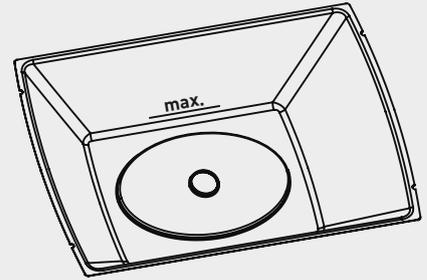


- To avoid a grease fire and to prevent grease from flowing into the interior, make sure that any grease dripping from the grill does not exceed the "max" mark.
- Do not allow children to carry out cleaning or user maintenance.



- Clean the grill completely after each use.
- Do not use abrasive or chlorinated cleaning agents.
- Use a mild detergent and warm water to clean the varnished body and plastic parts. Then dry the surface with a soft cloth.

- The reflector trough, the charcoal container, the grease guard and the ignition bowl can be easily cleaned of grime and grease residues with Enders Rack Cleaner/Barbecue Cleaner. All four components are made of stainless steel and therefore also dishwasher safe.
- We recommend Enders Rack Cleaner/Barbecue Cleaner for cleaning the grill grate.
- Dry the grill completely before the next use.

DISPOSAL

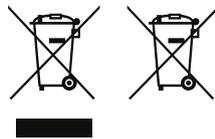

The product packaging is made of recyclable materials. Please dispose of packaging according to material type in the designated collection containers.

If you no longer wish to keep the article, do not throw it in the household waste. Ask your local waste disposal company or municipal administration about possibilities for environmentally friendly and resource-conservative disposal.

Empty batteries must be disposed of in accordance with the legal regulations (BattG). Empty batteries must not be disposed of with household waste. As a consumer, you are legally obliged to dispose of all rechargeable and non-rechargeable batteries, whether they contain harmful substances* or not, at a collection point in your community, district or retail outlet so that they can be disposed of in an environmentally friendly manner.

*marked with: Cd = cadmium, Pb = lead

Only dispose of used charcoal in metal or other non-flammable containers intended for this purpose. Do not place them in plastic containers or other containers made of flammable materials.

OPTIONALLY AVAILABLE ACCESSORIES

IGNITION PASTE 200 ML



Item no. 1386



BEECH CHARCOAL 1 KG



Item no. 1383



AURORA BAG

With the gymstyle bag for the Aurora, you can easily transport your grill from A to B. The included carrying case keeps the grill from getting the inside of the bag dirty.

- Bag made of tough and easy to clean nylon
- The individually adjustable straps make it comfortable to carry

Item no. 1389



WARRANTY



We grant a **2-year warranty** on the functioning of the device. The proper handling of the device and official proof of the date of purchase are required for the warranty to be applicable.

The warranty expires at the end of the warranty period or immediately if you make any modifications to the device yourself. No modifications may be carried out on components that have been sealed by the manufacturer or their representative!

If, despite our quality checks, your product should be defective, please do not bring it back to the retailer but contact the service directly. By doing so, we can ensure a quick processing of your complaint.

Service:

www.enders-germany.com

Please fill in the form and keep the warranty card and proof of purchase for further questions!

Model name

Item number Manufacturer

Serial number (see back of device)

Purchase date

Place of purchase

Attach proof of purchase

MANUFACTURER

Enders Colsman AG

Subject to colour variations and technical modifications for the purpose of product improvement.